## MODEL RV RELIEF VALVE



## **Model RV Relief Valve**

Emergency Relief Valves are used to relieve fuel oil on the discharge of pumps where a flow restriction downstream of the pump will cause an oil spill. Also they are used on lines where thermal expansion will cause over-pressuring of the piping and a possible leak. Relief valves are not to be adjusted in the field and are set at the factory.

These units are designed for use with fuel oil (diesel).

## **Specifications:**

- Threaded Female NPT Connections
- Temperature range: -60 to +406 degrees F
- Pressures up to 500psi
- Stainless steel spring
- Spherical pivot between disc and spring corrects misalignment and compensates for spring side thrust.
- Factory set and tested
- UL 842 listed for fuel oil service



<sup>\*</sup> Non-code Liquid Capacity - 10% accumulation (GPH) at these pressures

